

SINCE 1908

Solis

SWISS AIR

Type 3802

User Manual




 | SWISS
MADE

▲ SAFETY INFORMATION

- Persons with limited physical, sensory or mental capabilities, or persons without the appropriate knowledge or experience, including children, may not use the appliance unless they are supervised by a person responsible for their safety or given instruction by such a person as to how the appliance is to be used. In addition, they must understand exactly what hazards may arise from the use of the appliance and how it can be used in a safe manner. Cleaning and maintenance of the appliance may not be carried out by children unless under supervision.
- Repairs to this appliance, including mains cable replacement, may only be carried out by authorised service agents. Improper repair work can be a source of danger to appliance users.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- We recommend the installation of a residual current circuit-breaker to provide additional protection when using electrical appliances. It is advisable to use a circuit-breaker with a nominal fault current of maximum 30 mA. Your local electrician can advise you.
- **Caution! Never operate this appliance near bathtubs, wash basins or other vessels containing water.**
- Do not let children play with the appliance.



▲ APPLIANCE DESCRIPTION

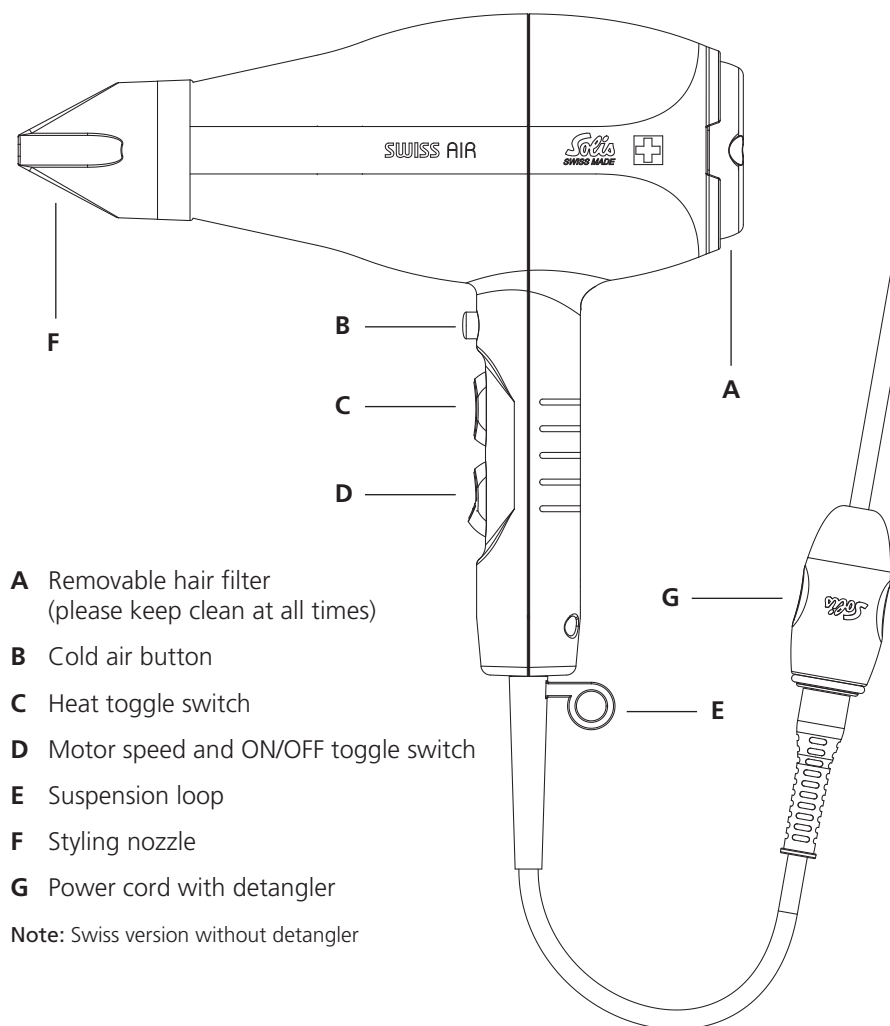

- A** Removable hair filter (please keep clean at all times)
- B** Cold air button
- C** Heat toggle switch
- D** Motor speed and ON/OFF toggle switch
- E** Suspension loop
- F** Styling nozzle
- G** Power cord with detangler

Note: Swiss version without detangler



Please keep the hair dryer clean and always remove dust and hair to increase its life span.

A Removable hair filter

- To remove sucked-in dust and hair from the hair filter, you can remove the hair filter by gently turning it to the left. Do this only if the appliance is unplugged. Use a brush to clean the hair filter. After cleaning, put the hair filter back in place and lock it by turning it to the right. **Only place the hair filter on the hair dryer when dry! The appliance must only be used with the hair filter in place!** Regularly cleaning the hair filter greatly increases the life span of the hair dryer.

B Cold air button

- Use the cold air button to increase the fullness and tone of your hair and to stabilise your hairstyle. We recommend using the cold air button after drying and brushing your hair.

C Heat toggle switch

- Use the upper toggle switch to choose from 3 different heat settings: cold, warm and maximum heat. Please refer to the description given in the section "Switching the appliance on and setting heat and motor speed" on the next page.

D Motor speed and ON/OFF toggle switch

- Use the bottom toggle switch to choose between low and high motor speed resp. switch the appliance off. Please refer to the description given in the section "Switching the appliance on and setting heat and motor speed" on the next page.

E Suspension loop

- The practical suspension loop can be used to store the hair dryer safely and saving space.

F Styling nozzle

- Use this nozzle to accurately point the jet of hot or cold air at single strands of hair or quickly dry your hair. The styling nozzle can also used while brushing.

G Power cord with detangler

- The detangler prevents the power cord from twisting and tangling up while the hair dryer is in use.

▲ STARTING UP

- Please read all safety precautions and information carefully and keep this manual for later reading.**

SWITCHING THE APPLIANCE ON AND SETTING HEAT AND MOTOR SPEED

- Use the two toggle switches to adjust heat and motor speed:

C Upper toggle switch: heat



cold



warm



maximum heat

D Lower toggle switch: motor speed and ON/OFF

Appliance switched
off

Motor speed low



Motor speed high

CLEANING AND MAINTENANCE

- Always pull the plug before cleaning the appliance. Keep the appliance away from water and keep it safe from dust, dirt and lint. Regularly remove and clean the hair filter with a soft brush. After cleaning, reinstall the hair filter. Use only a slightly damp cloth to wipe the appliance clean and dry it afterwards with a soft cloth.

OVERHEATING PROTECTION

- The appliance is equipped with a safety thermostat and the heating element automatically switches off if it overheats. The motor keeps running to cool the heating element. After a short break, the heating element switches back on automatically. You should still make sure that the air inlets and outlets are completely free from dust and lint and, if necessary, clean the appliance with a dry cloth.

▲ DISPOSAL



EU 2012/19/EU

Information for correct disposal of the product in accordance with the European Directive EU 2012/19/EU.

At the end of its working life this equipment must not be disposed of as an household waste. It must be taken to special local community waste collection centres or to a dealer providing this service. Disposing of electrical and electronic equipment separately avoids possible negative effects on the environment and human health deriving from an inappropriate disposal and enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed-out dustbin.

Solis of Switzerland Ltd reserves the right to carry out technical and visual changes and modifications to improve the product at any time.

SOLIS HELPLINE

This item stands out due to its long-life cycle and reliability. Despite this though, if a malfunction ever occurs, simply give us a call. Often a breakdown can be easily and quickly remedied with the right tip or technique without having to straight away send off the device for repair. We will give you all the advice and practical support you require. The contact addresses can be found at the end of this manual.

Keep the original packaging in a safe place so that you may use it in the event that transportation or shipping of the product becomes necessary.

▲ Solis customer service

Please contact us in advance of sending in products for return or repair. We will gladly give you the respective address. Alternatively, you can simply visit www.solis.com.

CH

Schweiz / Suisse Svizzera

✉ Solis Produzione SA
Centro Solis
Via Penate 4
CH-6850 Mendrisio

Adresse für Warenretouren
abweichend – siehe:

Adresse différente pour les
retours de produit – voir:

Indirizzo differente per resi
di merce - vedi:

www.solis.com

☎ 091-802 90 10

@ support.ch@solis.com

🌐 www.solis.ch

D

Deutschland

✉ Solis Deutschland GmbH
Marienstrasse 10
D-78054 Villingen-
Schwenningen

Adresse für Warenretouren
abweichend – siehe:

www.solis.com

☎ 0800-724 07 02

@ info.de@solis.com

🌐 www.solis.de

AT

Österreich

✉ Solis Austria
Bruderhofstrasse 10
A-6800 Feldkirch

Adresse für Warenretouren
abweichend – siehe:

www.solis.com

☎ 0800-22 03 92

@ info.at@solis.com

🌐 www.solis.at

NL

Nederland

✉ Solis Benelux BV
Stadskade 318
NL-7311 XX
Apeldoorn

Afwijkend adres voor
productretouren – zie:
www.solis.com

☎ 085-4010 722

@ info.nl@solis.com

🌐 www.solisonline.nl

B LU

België / Belgique Belgien / Luxembourg

✉ Solis Benelux BV
Stadskade 318
NL-7311 XX
Apeldoorn

Address for return shipment of
goods differs – please refer to:

Afwijkend adres voor
productretouren – zie:

Adresse différente pour les
retours de produit – voir:

www.solis.com

☎ +32-(0)2-808 35 82

@ info.be@solis.com

🌐 www.solis.be

INT

International

✉ Solis Produzione SA
Centro Solis
Via Penate 4
CH-6850 Mendrisio
Switzerland

Address for return shipment of
goods differs – please refer to

www.solis.com

☎ +41-91-802 90 10

@ support.ch@solis.com

🌐 www.solis.com